

# GO CONSOLE

## Owner's Manual

8975101 REV B-2





## CORPORATE HEADQUARTERS

5100 River Road  
Schiller Park, Illinois 60176 • U.S.A.  
847.288.3300 • FAX: 847.288.3703  
Service phone number: 800.351.3737 (toll-free within U.S.A., Canada)  
Global Website: [www.lifefitness.com](http://www.lifefitness.com)

## INTERNATIONAL OFFICES

### AMERICAS

#### North America Life Fitness Inc.

5100 N River Road  
Schiller Park, IL 60176 U.S.A  
Telephone: (847) 288 3300  
Fax: (847) 288 3703  
Service Telephone: (800) 351 3737  
Service Email: [customersupport@lifefitness.com](mailto:customersupport@lifefitness.com)  
Sales/Marketing Email:  
[consumerproducts@lifefitness.com](mailto:consumerproducts@lifefitness.com)  
Operating Hours: 7:00 am-6:00 pm (CST)

#### Brazil Life Fitness Brasil

Av. Cidade Jardim, 900  
Jd. Paulistano  
São Paulo, SP 01454-000  
BRAZIL  
SAC: 0800 773 8282  
Telephone: +55 (11) 3095 5200  
Fax: +55 (11) 3095 5201  
Service Email: [suporte@lifefitness.com.br](mailto:suporte@lifefitness.com.br)  
Sales/Marketing Email: [lifefitness@lifefitness.com.br](mailto:lifefitness@lifefitness.com.br)  
Service Operating Hours:  
9:00 - 17:00 (BRT) (Monday-Friday)  
Store Operating Hours:  
9:00 -20:00 (BRT) (Monday-Friday)  
10:00 - 16:00 (BRT) (Saturday)

#### Latin America & Caribbean\* Life Fitness Inc.

5100 N River Road  
Schiller Park, IL 60176 U.S.A  
Telephone: (847) 288 3300  
Fax: (847) 288 3703  
Service Email: [customersupport@lifefitness.com](mailto:customersupport@lifefitness.com)  
Sales/Marketing Email: [commercialsales@lifefitness.com](mailto:commercialsales@lifefitness.com)  
Operating Hours: 7:00am-6:00pm (CST)

### EUROPE, MIDDLE EAST, & AFRICA (EMEA)

#### Netherlands & Luxemburg Life Fitness Atlantic BV

Bijdorplein 25-31  
2992 LB Barendrecht  
THE NETHERLANDS  
Telephone: (+31) 180 646 666  
Fax: (+31) 180 646 699  
Service Email: [service.benelux@lifefitness.com](mailto:service.benelux@lifefitness.com)  
Sales/Marketing Email:  
[marketing.benelux@lifefitness.com](mailto:marketing.benelux@lifefitness.com)  
Operating Hours: 9.00h-17.00h (CET)

#### United Kingdom & Ireland Life Fitness UK LTD

Queen Adelaide  
Ely, Cambs, CB7 4UB  
Telephone: General Office (+44) 1353.666017  
Customer Support (+44) 1353.665507  
Fax: (+44) 1353.666018  
Service Email: [uk.support@lifefitness.com](mailto:uk.support@lifefitness.com)  
Sales/Marketing Email: [life@lifefitness.com](mailto:life@lifefitness.com)  
Operating Hours:  
General Office: 9.00am - 5.00pm (GMT)

Customer Support: 8.30am - 5.00pm (GMT)

#### Germany & Switzerland Life Fitness Europe GMBH

Siemensstraße 3  
85716 Unterschleißheim  
GERMANY  
Telephone: (+49) 89.31 77 51.0 (Germany)  
(+41) 0848 000 901 (Switzerland)  
Fax: (+49) 89.31 77 51.99 (Germany)  
(+41) 043 818 07 20 (Switzerland)  
Service Email: [kundendienst@lifefitness.com](mailto:kundendienst@lifefitness.com)  
Sales/Marketing Email: [kundenberatung@lifefitness.com](mailto:kundenberatung@lifefitness.com)  
Operating Hours: 08.30 - 16.30h (CET)

#### Austria Life Fitness Austria

Vertriebs G.m.b.H.  
Dückerstraße 7-9/3/36  
1220 Vienna  
AUSTRIA  
Telephone: (+43) 1.61.57.198  
Fax: (+43) 1.61.57.198.20  
Service Email: [kundendienst@lifefitness.com](mailto:kundendienst@lifefitness.com)  
Marketing/Sales Email: [kundenberatung@lifefitness.com](mailto:kundenberatung@lifefitness.com)  
Operating Hours: 08.30-16.30.h (MEZ)

#### Spain Life Fitness IBERIA

C/Frederic Mompou 5,1ªª  
08960 Sant Just Desvern Barcelona  
SPAIN  
Telephone: (+34) 93.672.4660  
Fax: (+34) 93.672.4670  
Service Email: [info.iberia@lifefitness.com](mailto:info.iberia@lifefitness.com)  
Sales/Marketing Email: [info.iberia@lifefitness.com](mailto:info.iberia@lifefitness.com)  
Operating Hours:  
9.00h-18.00h (Monday-Thursday)  
8.30h-15.00h (Friday)

#### Belgium Life Fitness Benelux NV

Parc Industriel de Petit-Rechain  
4800 Verviers  
BELGIUM  
Telephone: (+32) 87 300 942  
Fax: (+32) 87 300 943  
Service Email: [service.benelux@lifefitness.com](mailto:service.benelux@lifefitness.com)  
Sales/Marketing Email:  
[marketing.benelux@lifefitness.com](mailto:marketing.benelux@lifefitness.com)  
Operating Hours: 9.00h -17.00h (CET)

#### Italy Life Fitness Europe GmbH

Siemensstraße 3  
85716 Unterschleißheim  
GERMANY  
Telephone: (+39) 02-55378611  
Service: 800438836 (In Italy)  
Fax: (+39) 02-55378699  
Service Email: [assistentatecnica@lifefitness.com](mailto:assistentatecnica@lifefitness.com)  
Sales/Marketing Email: [info@lifefitnessitalia.com](mailto:info@lifefitnessitalia.com)  
Operating Hours: 08:30 - 16:30h (CET)

#### All Other EMEA countries & Distributor Business C-EMEA\*

Bijdorplein 25-31  
2992 LB Barendrecht  
THE NETHERLANDS  
Telephone: (+31) 180 646 644  
Fax: (+31) 180 646 699  
Service Email: [service.db.cemea@lifefitness.com](mailto:service.db.cemea@lifefitness.com)  
Sales/Marketing Email:  
[marketing.db.cemea@lifefitness.com](mailto:marketing.db.cemea@lifefitness.com)  
Operating Hours: 9.00h-17.00h (CET)

### ASIA PACIFIC (AP)

#### Japan Life Fitness Japan

Nippon Brunswick Bldg., #8F  
5-27-7 Sendagaya  
Shibuya-Ku, Tokyo  
Japan 151-0051  
Telephone: (+81) 3.3359.4309  
Fax: (+81) 3.3359.4307  
Service Email: [service@lifefitnessjapan.com](mailto:service@lifefitnessjapan.com)  
Sales/Marketing Email: [sales@lifefitnessjapan.com](mailto:sales@lifefitnessjapan.com)  
Operating Hours: 9.00h-17.00h (JAPAN)

#### China and Hong Kong Life Fitness Asia Pacific LTD

Room 2610, Miramar Tower  
132 Nathan Road  
Tsimshatsui, Kowloon  
HONG KONG  
Telephone: (+852) 2891.6677  
Fax: (+852) 2575.6001  
Service Email: [HongKongEnquiry@lifefitness.com](mailto:HongKongEnquiry@lifefitness.com)  
Sales/Marketing Email: [ChinaEnquiry@lifefitness.com](mailto:ChinaEnquiry@lifefitness.com)  
Operating Hours: 9.00h-18.00h

#### All Other Asia Pacific countries & distributor business Asia Pacific\*

Room 2610, Miramar Tower  
132 Nathan Road  
Tsimshatsui, Kowloon  
HONG KONG  
Telephone: (+852) 2891.6677  
Fax: (+852) 2575.6001  
Service Email: [HongKongEnquiry@lifefitness.com](mailto:HongKongEnquiry@lifefitness.com)  
Sales/Marketing Email: [ChinaEnquiry@lifefitness.com](mailto:ChinaEnquiry@lifefitness.com)  
Operating Hours: 9.00h-18.00h

Thank you for purchasing a Life Fitness product. Before using this product, please read this owner's manual along with the base assembly manual in its entirety to ensure that you have the knowledge to safely and properly operate all of this product's features. We hope you achieve the product experience that you expect, but if you do have any service issues, please go to the *How to Obtain Product Service* section which will provide information on obtaining product service.

#### FCC Warning - Possible Radio / Television Interference

**Note:** *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the user manual, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Class HB (Home): Domestic use.



**CAUTION: Any changes or modifications to this equipment could void the product warranty.**

Any service, other than cleaning or user maintenance, must be performed by an authorized service representative. There are no user-serviceable parts.

# TABLE OF CONTENTS

1. Important Safety Instructions	.5
2. Getting Started	.7
2.1 The Heart Rate Telemetry Chest Strap	.7
2.2 Contact Heart Rate	.7
2.3 Heart Rate Zone Training®	.8
3. Go Console Overview	.9
4. How to Use the Go Console	.11
4.1 Level / Incline Display	.11
4.2 Time Display	.12
4.3 Speed Display	.12
4.4 Message Center	.12
4.5 Distance Display	.12
4.6 Heart Rate Display	.12
4.7 Target Heart Rate Display	.13
4.8 Calorie Display	.13
4.9 Workout Profile Display	.13
4.10 Workout Profile Indicator Arrow	.14
4.11 Level Meter	.14
4.12 Settings Button	.14
4.13 User Profiles Button	.14
4.14 Pause / Resume Button	.14
4.15 Navigation Button	.15
4.16 Enter / Start Button	.15
4.17 Reset Button	.15
4.18 Race Mode Button	.15
4.19 Goal Workouts Button	.15
4.20 Energy Saver Button	.15
5. Workouts, Modes and Settings	.16
5.1 Workout Overviews	.16
5.2 How to Use the Workouts	.17
5.3 How to Use Custom Workouts	.20
5.4 How to Use Race Mode	.22
5.5 How to Use the User Profiles	.22
5.6 Safety Mode	.24
5.7 How to Use the Settings Menu	.24
6. Service and Product Maintenance	.26
6.1 Preventive Maintenance Tips	.26
6.2 Troubleshooting	.27
6.3 How to Obtain Product Service	.28
7. Specifications	.29
8. Warranty Information	.30

© 2011 Life Fitness, a division of Brunswick Corporation. All rights reserved.

This Operation Manual describes the functions of the following product:

**Life Fitness GO Console**



**CAUTION:** Health-related injuries may result from incorrect or excessive use of exercise equipment. The manufacturer **STRONGLY** recommends seeing a physician for a complete medical exam before undertaking an exercise program, particularly if the user has a family history of high blood pressure or heart disease; or is over the age of 45; or smokes, has high cholesterol, is obese, or has not exercised regularly in the past year. The manufacturer also recommends consulting a fitness professional on the correct use of this product.

If, at any time while exercising, the user experiences faintness, dizziness, pain, or shortness of breath, he or she must stop immediately.

# 1 IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** Read all instructions before using this product.

**WARNING:** Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death.

**DANGER:** To reduce the risk of electrical shock, always unplug this Life Fitness product before cleaning or attempting any maintenance activity.



**SAFETY WARNING:** The safety of the product can be maintained only if it is examined regularly for damage and wear. See *Service and Product Maintenance* section for details.



The heart rate hand pulse sensors provide an approximate heart rate value. The sensors are not medical devices and should not be used in any type of medical application.

- Before using this product, it is essential to read this ENTIRE user manual and ALL instructions. This product is intended for use solely in the manner described in this manual.
- Always follow the console instructions for proper operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never insert objects into any openings in this product. If an object should drop inside, turn off the power, unplug the power cord from the outlet and carefully retrieve it. If the item cannot be reached, contact Life Fitness Customer Support Services.
- Never place liquids of any type directly on the unit, except in an accessory tray. Containers with lids are recommended.
- Do not use the product outdoors, near swimming pools or in areas of high humidity.
- Keep all loose clothing, shoelaces, and towels away from the product.
- Keep the area around the product clear of any obstructions, including walls and furniture.
- Use caution when mounting or dismounting the product.
- Never operate a Life Fitness product if it has been dropped, damaged, or even partially immersed in water. Contact Life Fitness Customer Support Services.
- Keep the power cord away from heated surfaces. Do not pull the equipment by the power cord or use the power cord as a handle.
- Wear shoes with rubber or high-traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Do not use the product in bare feet.
- Do not tip the product on its side during operation.
- Keep hands and feet away from all moving parts.
- To ensure proper functioning of this product, do not install attachments or accessories that are not provided or recommended by Life Fitness.
- Use this product in a well-ventilated area.
- Use this product on a solid, level surface.
- Make sure that all components are fastened securely.

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact Life Fitness Customer Support Services.
- Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Allow LCD consoles to “normalize” with respect to temperature for one hour before plugging the unit in and/or using.

**SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE.**




# 2 GETTING STARTED

## 2.1 THE HEART RATE TELEMETRY CHEST STRAP

The console is equipped with a wireless heart rate monitoring system in which electrodes, pressed against the skin, transfer heart rate signals from the user to the console. The electrodes are inside the chest strap (A) that the user wears during the workout. The transmitter strap delivers an optimal heart rate reading when the electrodes are in direct contact with bare skin. However it functions properly through a thin layer of wet clothing. The electrodes are two grooved surfaces on the underside of the strap, and must remain wet to accurately transmit the electrical impulses of the heart back to the receiver. To use, first moisten the electrodes. Then, secure the strap as high under the chest muscles as possible. The strap should be snug, but comfortable enough to allow for normal breathing. Electrodes must be wet to work properly. If it becomes necessary to re-moisten, grasp the center of the strap, pull it away from your chest to expose the electrodes, and moisten. See diagram below for correct positioning of the strap.

**Note:** Using the wireless heart rate telemetry chest strap will provide more accurate heart rate readings than the hand pulse sensors.

**Note:** To ensure the highest performance, use the wireless chest strap that was provided with the product.

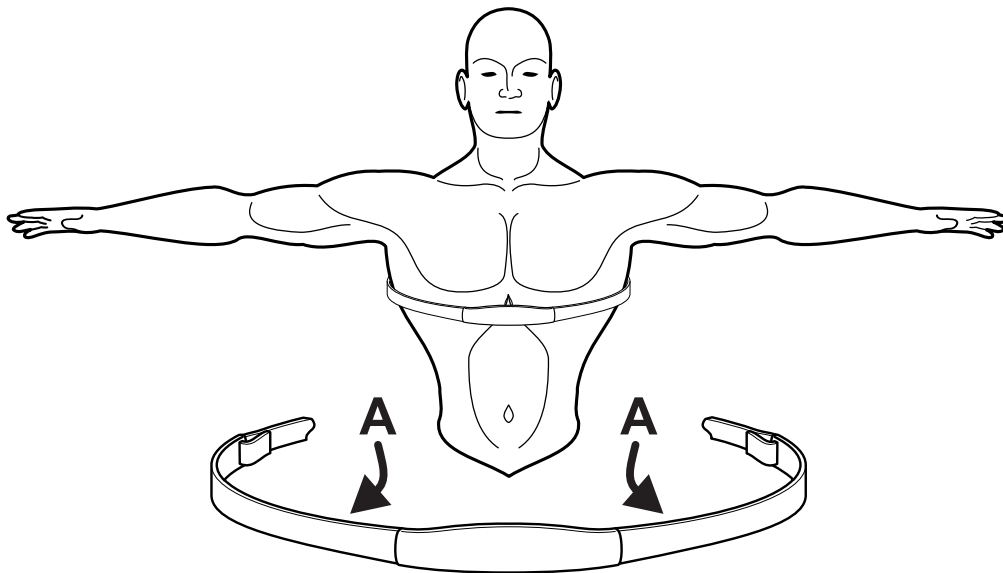

## 2.2 CONTACT HEART RATE

When using Contact Heart Rate make certain to grasp sensors firmly and keep hands still. If heart rate seems substantially higher or lower than expected, remove hands from sensors until heart rate disappears. Dry hands and grasp sensors again until heart rate seems accurate. If this does not work you may need to slow the machine to get an accurate reading. On treadmills we recommend, for safety and accurate heart rate readings, that the user stand on the siderails when attempting to monitor heart rate with contact electrodes.



**Note:** The contact heart rate system may be less or more accurate with different individuals.

## 2.3 HEART RATE ZONE TRAINING®

Research shows that maintaining a specific heart rate while exercising is the optimal way to monitor the intensity of a workout and to achieve maximum results. That is the idea behind the Life Fitness Heart Rate Zone Training® approach to exercise.

Zone Training identifies an exerciser's ideal heart rate range, or zone, for burning fat or increasing cardiovascular fitness. The zone is a percentage of the theoretical maximum (HRmax), and its value depends on the workout. The maximal heart rate formula is defined by the American College of Sports Medicine's "Guidelines for Exercise Testing and Prescription", 8th Edition, 2009. HRmax equals to 206.9 minus the total of 0.67 multiplied by a person's age.

$$\text{HR Max} = 206.9 - (0.67 * \text{age})$$

The Life Fitness products feature these exclusive workouts designed to take full advantage of the benefits of Heart Rate Zone Training+ exercise:

- FAT BURN • CARDIO • HEART RATE HILL • HEART RATE INTERVAL • EXTREME HEART RATE


**Note:** Consulting a fitness trainer is recommended for defining specific fitness goals and designing a workout program.

The HeartSync workout programs measure heart rate. Wear the telemetry heart rate chest strap, or grip the contact heart rate sensors, to enable the on-board computer to monitor the heart rate during a workout. The computer automatically adjusts the incline or level to maintain the target heart rate based on the actual heart rate.


Age	Theoretical Maximum Heart Rate	65% (Fat Burn)	80% (Cardio)
10	200	130	160
20	194	126	155
30	187	121	149
40	180	117	144
50	173	113	139
60	167	108	133
70	160	104	128
80	153	100	123
90	147	95	117
99	141	91	112

# 3 GO CONSOLE OVERVIEW

Read the entire user manual before setting up your equipment.

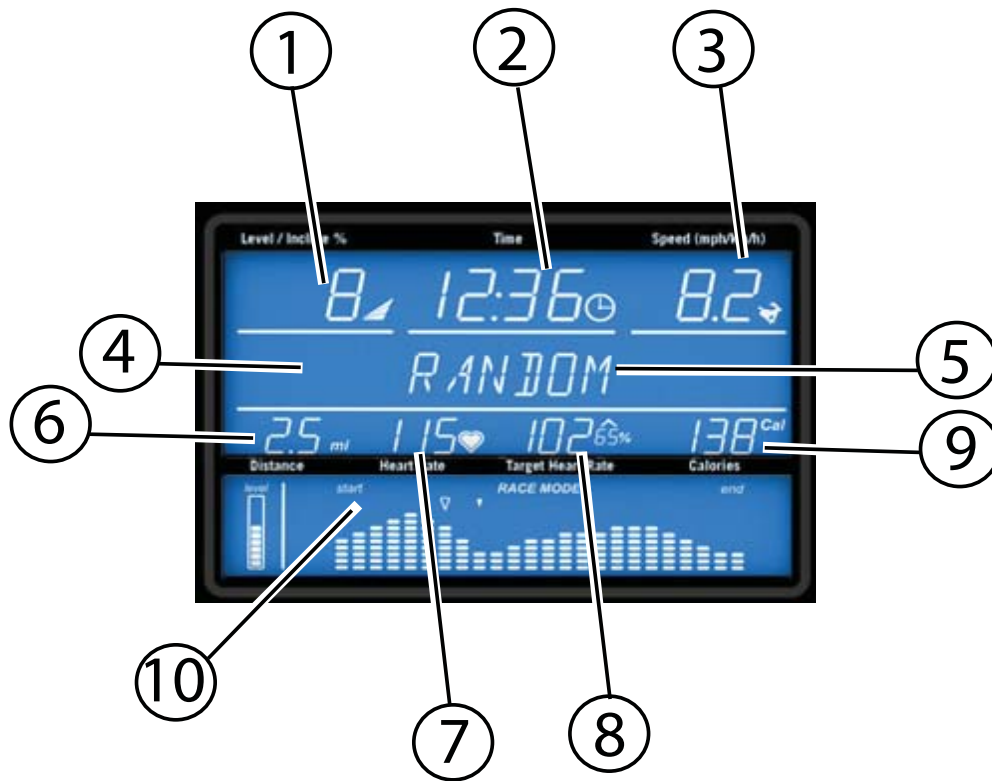

- 1. Level Display
- 2. Time Display
- 3. Speed Display
- 4. Setup Steps Icon (1,2,3,4,5)
- 5. Message Center
- 6. Distance Display
- 7. Heart Rate Display
- 8. Target Heart Rate Display
- 9. Calorie Display
- 10. Workout Profile Display

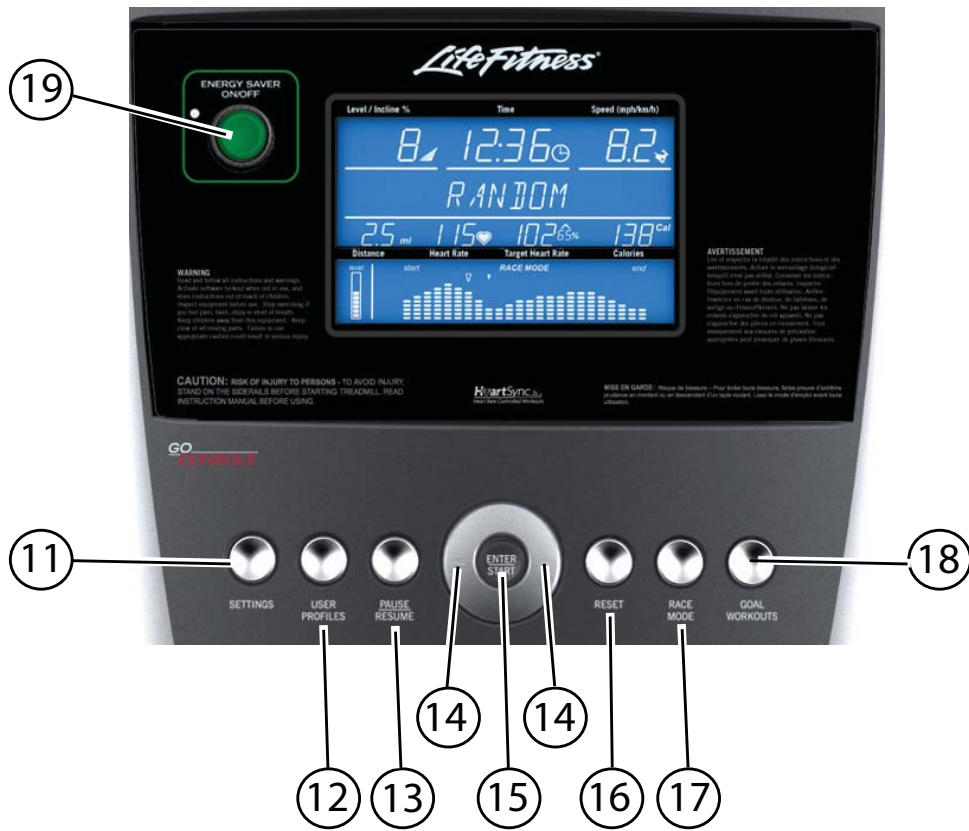

**11. Settings Button**

**12. User Profiles Button**

**13. Pause/Resume Button**

**14. Navigation Buttons**

**15. Enter/Start Button**

**16. Reset Button**

**17. Race Mode Button**

**18. Goal Workout Button**

**19. Energy Saver Button**

# 4 HOW TO USE THE GO CONSOLE

The Go Console was designed to make navigation as simple as possible by using special colors and keys. The console display was designed to reduce toggling between workout information. The design of each button on the console was designed to give the user tactile feedback. Each piece of workout feedback, including level, time and speed, has its own dedicated window.

## 4.1 LEVEL / INCLINE DISPLAY



**a. Level Display (Bikes/Cross-Trainers)** – There are two types of levels used on Life Fitness bikes and cross-trainers. The first type of level is the actual brake resistance level. This type of level is only adjustable by the user in a manual workout. The range of possible brake resistance levels is 1-20. The second type of level is difficulty level.

There are 20 difficulty levels. Difficulty level corresponds to a range of actual brake resistance levels and is only used in RANDOM, HILL, EZ INCLINE, and SPORTS TRAINING workouts. So when you select a difficulty level of 10 it corresponds to a range of actual brake resistance levels of 5-14. During RANDOM, HILL, EZ INCLINE, and SPORTS TRAINING the difficulty level will only be displayed during workout setup and anytime you choose to change the level during the workout. At all other times during a workout the actual level will be displayed.

**b. Level / Incline Display (Treadmills)** – There are two types of levels used on Life Fitness treadmills. The first type of level is an incline level or percentage. Incline level is only manually adjusted by the user in a manual workout. The range of possible incline percentages is 0-12% (F3) and 0-15% (T3), and can be adjusted in 0.5% increments. The second difficulty level corresponds to a range of actual incline percentages. Difficulty levels are only used in RANDOM, HILL, EZ INCLINE, and SPORTS TRAINING workouts. So when a user selects a difficulty level of 10 it corresponds to a range of incline percentages between 3% – 7%. During RANDOM, HILL, EZ INCLINE, and SPORTS TRAINING the difficulty level will be displayed only during workout setup and anytime the difficulty level is changed during the workout. At all other times during these workouts the incline percentage is displayed.

**c. Changing the Level during a Workout** – To change the level during a workout the underscore beneath the top row of workout feedback needs to be positioned under level. If the underscore is not under level, it can be moved using the Left/Right arrows. To adjust the level simply press the up and down keys.

Difficulty Level	Brake Level (CT / Bikes)	Incline Level (Treadmills)
20	12 - 20	8.0 - 12.0 Note: Adjusts in 0.5% increments
19	11 - 19	7.5 - 11.5 Note: Adjusts in 0.5% increments
18	10 - 18	7.0 - 11.0 Note: Adjusts in 0.5% increments
17	9 - 17	6.5 - 10.5 Note: Adjusts in 0.5% increments
16	8 - 17	6.0 - 10.0 Note: Adjusts in 0.5% increments
15	8 - 16	5.5 - 9.5 Note: Adjusts in 0.5% increments
14	7 - 16	5.0 - 9.0 Note: Adjusts in 0.5% increments
13	7 - 15	4.5 - 8.5 Note: Adjusts in 0.5% increments
12	6 - 15	4.0 - 8.0 Note: Adjusts in 0.5% increments
11	6 - 14	3.5 - 7.5 Note: Adjusts in 0.5% increments
10	5 - 14	3.0 - 7.0 Note: Adjusts in 0.5% increments
9	5 - 13	2.5 - 6.5 Note: Adjusts in 0.5% increments
8	4 - 13	2.0 - 6.0 Note: Adjusts in 0.5% increments
7	4 - 12	1.5 - 5.5 Note: Adjusts in 0.5% increments
6	3 - 12	1.0 - 5.0 Note: Adjusts in 0.5% increments
5	3 - 11	0.5 - 4.5 Note: Adjusts in 0.5% increments
4	2 - 11	0.0 - 4.0 Note: Adjusts in 0.5% increments
3	2 - 10	0.0 - 3.0 Note: Adjusts in 0.3% increments
2	1 - 10	0.0 - 2.0 Note: Adjusts in 0.15% increments
1	1 - 9	0.0 - 1.0 Note: Adjusts in 0.1% increments

## 4.2 TIME DISPLAY



The time window displays the total workout time set by the user during workout setup, which is a range from 1-99 minutes depending on the program. During a workout the time display will show time remaining and count down. Time can be changed to count up in the Settings Menu and the time display will show time elapsed. See Section 5.6, *How to Use the Settings Menu*. The time set can be changed at any time during the workout by highlighting the time window with the underscore using the Left and Right arrows and then modifying the time with the Up and Down arrows. The clock icon minute hand will move in 15 minute increments. For example, if the remaining workout time is 10 minutes the clock will read 12:15.

## 4.3 SPEED DISPLAY



Speed is displayed in miles per hour (MPH). The formula tries to replicate miles per hour as if the exercise was being conducted outdoors. The speed range on bikes and cross-trainers is 0.5 mph and up, speed changes in increments of 0.1 mph. The speed range on treadmills is 0.5 mph to 10.0 mph on the F3 and 0.5 mph to 12.0 mph on the T3; it is adjustable in increments of 0.1 mph. Speed can be converted to kilometers per hour in the Settings Menu. See Section 5.6, *How to Use the Settings Menu*.

## 4.4 MESSAGE CENTER



The message center provides instructional information to the user from the moment the first key is pressed. The message center will coach the user through setting up a workout, including selecting a workout and entering time, level, and other workout specific information. Also during the workout if certain workout feedback like pace and METS are turned on in the Settings Menu, the message center will periodically show that information. Finally the message center is also used to coach the user when using Total Body Mode on the X8 cross-trainer.

## 4.5 DISTANCE DISPLAY



Distance is shown in miles. The distance formula tries to replicate miles as if the exercise was being conducted outdoors. The distance formula will not always be consistent with other Life Fitness products or other manufacturer's products. Distance can be converted to kilometers in the Settings Menu. See Section 5.6, *How to Use the Settings Menu*.

## 4.6 HEART RATE DISPLAY



The heart rate display calculates the user's actual heart rate in contractions or beats per minute during a workout. The user must be holding on to the contact heart rate electrodes or wearing a heart rate telemetry chest strap for the heart rate display to function. See Section 2.1, *The Heart Rate Telemetry Chest Strap*. Life Fitness recommends wearing the chest strap for the most accurate heart rate reading. If you are experiencing problems with your heart rate reading please read Section 2.2, *Contact Heart Rate* for recommendations on improving the contact heart rate reading.

## 4.7 TARGET HEART RATE DISPLAY



Target heart rate is a percentage of a user's maximum heart rate. The goal is to target a range that enables one's heart and lungs to receive the most benefit from a workout. The console calculates target heart rate by taking the maximum heart rate and multiplying it by an intensity level. Maximum heart rate =  $206.9 - (.67 \times \text{user's age})$ . Life Fitness intensity levels are 65% for weight loss and fat burning and 80% for improving cardiovascular endurance. The display will toggle between the 65% and 80% intensity levels. An arrow pointing up or down will illuminate to show when the user's actual heart rate is above or below the target heart rate.

**Example:** User's Age is 45.

$$206.9 - (.67 \times 45) = 176.75.$$

177 is the Maximum Heart Rate for a 45 year old.

$$177 \times 65\% = 115. \text{ 115 is the optimal target heart rate for weight loss and fat burning.}$$

## 4.8 CALORIE DISPLAY



A calorie is a unit used to measure energy. It represents the amount of energy obtained from food. One calorie is approximately enough energy to increase the temperature of 1 gram of water by 1 degree Celsius. The console calculates an average caloric burn based on a Life Fitness proprietary calorie equation. This formula may not match other manufacturer's machines or other Life Fitness machines.

## 4.9 WORKOUT PROFILE DISPLAY



The workout profile graphically displays the intensity of a workout with columns of various heights. During the workout the current intensity level the user is in is signified by an arrow located above the appropriate column. During a heart rate workout the workout profile acts like a graph of the user's heart rate. Each of the nine rows of the profile will represent the user's actual heart rate as a percentage of their heart rate max. Therefore by the end of the workout, the user will be able to visually see their heart rate ranges throughout the workout.

Row	Maximum Heart Rate Percent Range
1	<30%
2	30 - 39%
3	40 - 49%
4	50 - 59%
5	60 - 69%
6	70 - 79%
7	80 - 89%
8	90 - 99%
9	100%

**Note:** The percent in the table represents the user's actual heart rate as a percent of their heart rate max. The heart rate max is  $206.9 - (.67 \times \text{user's age})$ . For example: A 40 year old's heart rate max would be  $206.9 - (.67 \times 40) = 180$ . During their workout at the first interval their actual heart was 100. Therefore  $100/180 = .56$  or 56% and the profile would display the user at row four for the first interval of the workout.

## 4.10 WORKOUT PROFILE INDICATOR ARROW



The arrow located above the columns in the workout profile displays the position the user is at in the workout. The position is represented by the time entered during workout setup divided by the number of columns (24). For example during a 24-minute workout the arrow would move from column to column every minute. During Race Mode the arrow splits into two separate arrows, a filled in arrow and an outline of an arrow, to simulate the user and the pacer.

## 4.11 LEVEL METER

Indicates the intensity of the workout based on the level the user set. The higher the meter is filled, the more difficult the workout is. Please see the table below to see how the level meter is determined.

Level Range	<i>level</i>	Incline Range Treadmills Only
19 - 20		10.6 - 12.0%
17 - 18		9.1 - 10.5%
15 - 16		7.6 - 9.0%
13 - 14		6.5 - 7.5%
11 - 12		5.1 - 6.4%
9 - 10		4.1 - 5.0%
7 - 8		3.1 - 4.0%
5 - 6		2.1 - 3.0%
3 - 4		1.1 - 2.0%
1 - 2		0.0 - 1.0%

## 4.12 SETTINGS BUTTON



Press this button once to enter the Settings Menu of the console. In the Settings Menu the user can set preferences for the console display. See Section 5.6, *How to Use the Settings Menu*.

## 4.13 USER PROFILES BUTTON



Press this button once to select one of two user profiles to log into. Once programmed, the user profiles setting saves workout data for two primary users. Holding this button for 3 seconds will enter the User Profiles editing mode. See Section 5.5, *How to Use the User Profiles*.

## 4.14 PAUSE / RESUME BUTTON



When pressed once during a workout the workout is paused for 5 minutes. When pressed again the workout is resumed. If the paused workout is not resumed within 5 minutes, the console deletes the workout in progress and goes into Energy Saver Mode. The pause time can be modified in the user Settings Menu. See Section 5.6, *How to Use the Settings Menu*. **Note:** *When the Energy Saver mode is active, the machine will shut down after 5 minutes of non-use, regardless of Pause status.*



## 4.15 NAVIGATION BUTTON



Provides simple forward, back, up, and down software navigation as well as level, time, and speed (*treadmill only*) workout adjustments. While **setting up a workout** use the Left/Right arrows to scroll through workout setup options, and then use the Up/Down arrows to adjust the values. **During a workout**, use the Left/Right arrows to scroll between options like level and time, and then use the Up/Down arrows to adjust those values.

## 4.16 ENTER / START BUTTON



The ENTER / START button can be pressed at any time during initialization to begin a quick start 30 minute manual workout. During workout setup it is used as a selection key when choosing program parameters.

## 4.17 RESET BUTTON



Press this button when programming a workout to clear incorrect data, such as weight or age. Pressing RESET two times consecutively during a workout stops it immediately, at which point, the user returns to the select workout screen.

## 4.18 RACE MODE BUTTON



Press this button once during a MANUAL, RANDOM, HILL, EZ INCLINE, or SPORTS TRAINING workout to turn on Race Mode. This mode allows the user to race against a customized simulated pace. Press this button again while Race Mode is on to turn it off. See section 5.4, *How to Use Race Mode*.

## 4.19 GOAL WORKOUTS BUTTON



Press this button once to enter into the Goal Workouts selection screen. There are three goal workouts; Calorie goal, Target Heart Rate goal and Distance goal. The user sets their own goal for each workout.

## 4.20 ENERGY SAVER BUTTON



The Energy Saver Mode is used to minimize the power being pulled from the wall when the equipment is not in use. The unit will automatically go into Energy Saver Mode 5 minutes after ending a workout. Press the ENERGY SAVER button to either “wake up” the console or put it into the Energy Saver Mode. Energy Saver can be turned off in the Settings Menu. An indicator LED will flash while in Energy Saver Mode.

# 5 WORKOUTS, MODES, AND SETTINGS

## 5.1 WORKOUT OVERVIEWS

The Go Console has 13 specially designed pre-programmed workouts that have been developed by Life Fitness. Each workout has a different goal. Read the workout descriptions carefully so that you can develop a workout routine that focuses on reaching your specific goals.

The workout descriptions on the following pages all have headers labeled:

- Beginner-Just Starting
- Experienced-Fit
- Advanced-Athlete

Beginner workouts are workouts designed for users just starting to workout or just starting a workout routine. Beginner workouts have limited gradual intensity adjustments. Experienced workouts are designed for users seeking a more challenging workout. These users should have a stronger fitness base. Advanced workouts are designed for athletes training for cardiovascular endurance and special events.

Different workouts have different setup steps. This section provides details on the steps themselves. The main screen of the console is known as the “Select Workout” screen which looks like the following:



When this screen appears on the console, use either the Up/Down or Left/Right arrows to scroll through all the workout choices and select a workout by pressing ENTER. To begin a QUICK START workout, press ENTER when the above “Select Workout” screen appears.

When a workout is selected the display **Setup workout 1 2 3 4 5** will appear on the screen depending on how many steps are needed to setup a workout. The current step the user is on will blink to show where they are in the setup process. Throughout the workout setup process, the Up/Down arrows can be used to adjust the value that is selected and the Left/Right arrows can be used to scroll back and forth between different steps. In order to advance to the next step, either press the right arrow or enter key. After entering the last step, press ENTER to begin the workout.

**QUICK START** is the fastest way to begin exercising, and it bypasses the steps involved in selecting a specific workout program. Begin a QUICK START workout by pressing the ENTER key at the SELECT WORKOUT screen. After ENTER is pressed, a constant-level workout begins. The intensity level does not change automatically. You must change it using the arrows.


## 5.2 HOW TO USE THE WORKOUTS

### 1. Manual Workout (Beginner – Just Starting)

**Access:** This workout can be started by using the navigation keys to scroll to the MANUAL workout profile and pressing ENTER.

**Description:** The MANUAL workout is a simple workout that has no pre-defined intensity levels. The MANUAL workout starts the user at level 1 resistance level for bikes and cross-trainers and at 0.5 MPH and 0% incline for treadmills. The user is in complete control of level or speed/incline settings.

**Goal:** This workout was designed for users that do not have much experience working out on a product and like to have control of the level and speed/incline settings.

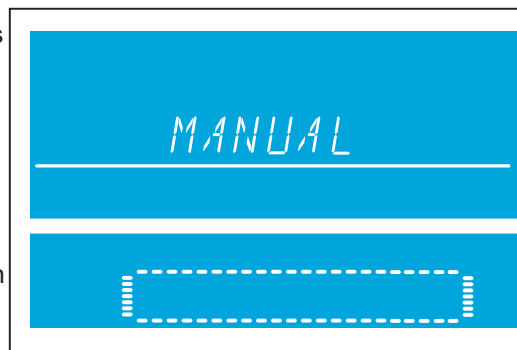

### 2. Random Workout (Experienced – Fit)

**Access:** This workout can be started by using the navigation keys to scroll to the RANDOM workout profile and pressing ENTER.

**Description:** In this workout, the console creates a terrain of different hills and valleys. Over 1 million different patterns are possible. RANDOM uses resistance or incline adjustments to create hills/valleys. Speed is controlled by the user.

**Goal:** This workout was designed to provide the end-user with unlimited workout variety. The goal of this workout is to prevent workout boredom and improve motivation.




### 3. Hill Workout (Experienced – Fit)

This workout can be started by using the navigation keys to scroll to the HILL workout profile and pressing ENTER.

**Description:** The Life Fitness patented HILL workout is an interval training workout. Intervals are periods of intense aerobic exercise. The workout profile window displays the levels of the intervals, which together have the appearance of hills and valleys. Resistance (*bikes and cross-trainers*) and Incline (*treadmills*) adjustments are used to simulate the hills/valleys, speed is controlled by the user.

The HILL workout has two main phases in between the warm-up and cool down.

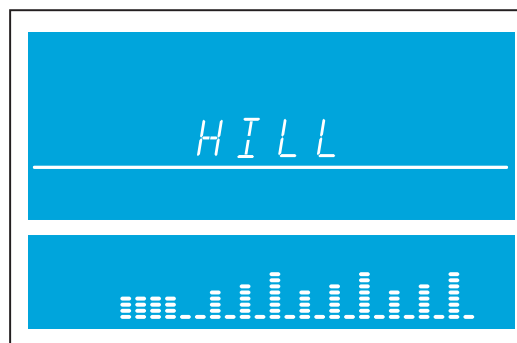

**Plateau:** Increases the intensity slightly and keeps it steady, to bring the heart rate to the low end of the target zone.

**Interval Training:** Is a series of increasingly steeper hills, alternating with valleys, or periods of recovery. The heart rate should rise to the high end of the target zone during this segment.

**Goal:** The computerized interval training workout has been scientifically demonstrated to promote greater cardio-respiratory improvement than steady-pace training. The goal of this workout is to improve cardiovascular endurance and break through fitness plateaus.

#### 4. EZ Incline™ (Beginner – Just Starting)

**Access:** This workout can be started by using the navigation keys to scroll to the EZ INCLINE workout profile and pressing ENTER.

**Description:** EZ INCLINE program consists of one hill. The user determines the elevation of the peak during the workout setup. The peak is reached after 75% of the workout time is complete. Afterward the resistance or incline gradually returns to level 1 or 0% respectively.

**Goal:** In this workout, the gradual changes in elevation are extremely subtle, which lowers the perceived exertion. This cardiovascular workout is effective, efficient, and enjoyable at the same time. The main goal of the workout is to improve cardiovascular endurance without the stress of a rigorous workout.



#### 5. Sports Training Workout (Experienced – Fit)

**Access:** This workout can be started by using the navigation keys to scroll to the SPORTS TRAINING workout profile and pressing ENTER.

**Description:** SPORTS TRAINING is a workout that simulates working out outdoors by using a baseline value to simulate a flat surface. The program then simulates moving uphill with values above the baseline and downhill with values below the baseline. The adjustments above and below the baseline are resistance or incline changes. Speed is controlled by the user.

**Goal:** The goal of this workout is to simulate outdoor training.



#### 6. Fat Burn Workout (Beginner – Just Starting)

\*Chest strap must be worn to execute the workout.

**Access:** This workout can be started by using the navigation keys to scroll to the FAT BURN workout profile and pressing ENTER.

**Description:** The user must wear a chest strap for this workout to adequately operate. This program only uses resistance or incline adjustments to increase and decrease heart rate. FAT BURN maintains the user at 65% of the user's theoretical maximum heart rate. The console continuously monitors and displays the heart rate, adjusting the intensity level of the product to reach and maintain a target heart rate range. The intensity will not change as long as the user is between 60%-72% of their target heart rate.

**Goal:** The goal of the FAT BURN workout is to efficiently burn fat by eliminating over-training and under-training and also maximizing the aerobic benefits of exercise by using the body's fat stores for energy.



#### 7. Cardio Workout (Experienced – Fit)

\*Chest strap must be worn to execute the workout

**Access:** This workout can be started by using the navigation keys to scroll to the CARDIO workout profile and pressing Enter.

**Description:** The user must wear a chest strap for this workout to adequately operate. This program only uses resistance or incline adjustments to increase and decrease heart rate. CARDIO maintains the user at 80% of the user's theoretical maximum heart rate. The console continuously monitors and displays the heart rate, adjusting the intensity level of the product to reach and maintain the target heart rate range. The intensity will not change as long as the user is between 72%-85% of their target heart rate.

**Goal:** The goal of the Cardio workout is to place a heavier workload on the heart muscle to emphasize cardiovascular endurance.



## 8. Heart Rate Hill Workout (Experienced – Fit)

\*Chest strap must be worn to execute the workout.

**Access:** This workout can be started by using the navigation keys to scroll to the HEART RATE HILL workout profile and pressing ENTER.

**Description:** The user must wear a chest strap for this workout to adequately operate. This program only uses resistance or incline adjustments to increase and decrease heart rate. HEART RATE HILL has a series of three hills and three valleys where the duration of the hills and valleys is determined by the user's heart rate.

After the warm-up, the intensity of the workout increases until the user reaches 70% of their max heart rate, which is the first hill.

Once the user reaches 70% of their max heart rate, the program will hold the intensity level for 1 minute. When the hill is completed, the program reduces the intensity and target heart rate goal to 65% of their max heart rate to simulate a valley or recovery period. Once the user's heart rate drops to 65% of their max heart rate, the program will keep them at 65% for 1 minute.

Next the program will increase intensity until the user reaches 75% of their maximum heart rate, this is the second hill followed by a valley with the target heart rate of 65%. Finally the third hill increases intensity until the user reaches 80% of their max heart rate, 80% is then held for 1 minute followed by the final 65% valley. At the end of the duration of hills and valleys, the workout enters a cooldown phase. Note that if the user does not reach a heart rate goal after five minutes, the message center displays a prompt to increase or decrease speed (*for treadmills*) or resistance (*for bikes and cross-trainers*), depending on whether the workout is in a hill or valley phase. The program does not proceed to a new heart rate goal until the user reaches the current goal.

**Goal:** The design intent of the HEART RATE HILL workout was to develop a program that adapts to the user's fitness level. As a user becomes more fit, they encounter additional hills and valleys in the same workout duration. This is because the heart rate is recovering more quickly during valleys.



## 9. Heart Rate Interval Workout (Experienced – Fit)

\*Chest strap must be worn to execute the workout.

**Access:** This workout can be started by using the navigation keys to scroll to the HEART RATE INTERVAL workout profile and pressing ENTER.

**Description:** The user must wear a chest strap for this workout to adequately operate. This program only uses resistance (*bikes and cross-trainers*) or incline (*treadmills*) adjustments to increase and decrease heart rate. This program alternates between a hill that brings the target heart rate up to 80% of the user's heart rate max and a valley that brings the target heart rate down to 65% of the user's heart rate max.

After the warm-up, the intensity of the workout increases until the user reaches 80% of their heart rate max, which is the first hill. Once the user reaches a target heart rate of 80%, the program will hold the intensity level for 3 minutes. When the hill is completed the program creates a valley, reducing the intensity until a target heart rate of 65% is reached.

This sequence continues for all three hills and valleys. At the end of the duration of hills and valleys, the workout enters a cooldown phase. Note that if the user does not reach a heart rate goal after five minutes, the message center displays a prompt to increase or decrease speed (*for treadmills*) or resistance (*for bikes and cross-trainers*), depending on whether the workout is in a hill or valley phase. The program does not proceed to a new heart rate goal until the user reaches the current goal.

**Goal:** The design intent of the HEART RATE INTERVAL workout was to develop a program that adapts to the user's fitness level and is more challenging than the HEART RATE HILL workout. As a user becomes more fit, they encounter additional hills and valleys in the same workout duration. This is because their heart rate is recovering more quickly during valleys.




## 10. Extreme Heart Rate Workout (Advanced – Athlete)

\*Chest strap must be worn to execute the workout.

**Access:** This workout can be started by using the navigation keys to scroll to the EXTREME HEART RATE workout profile and pressing ENTER.

**Description:** The user must wear a chest strap for this workout to adequately operate. This program only uses resistance or incline adjustments to increase and decrease heart rate. This program alternates between two target heart rates of 85% and 65% of the user's max heart rate alternating as quickly as possible. The effect is similar to that of performing sprints. During the workout once either of the two target heart rates is reached, it is held for 20 seconds and then the intensity changes to meet the other target heart rate.

**Goal:** The design of this workout is sports specific, challenging users with short bursts of resistance. The goal of this workout is to help the advanced users break through fitness improvement plateaus.

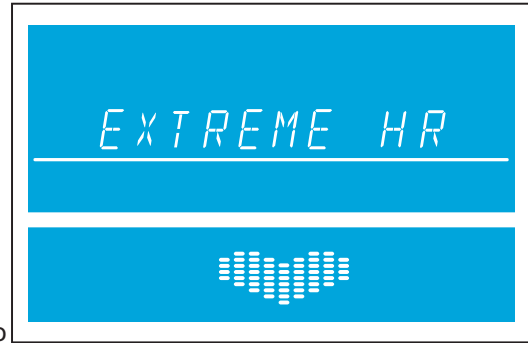

## 11. Goal Workouts (All levels)

Access GOAL Workouts by pressing the GOAL WORKOUTS key. Upon pressing the GOAL WORKOUTS key, the user will be able to scroll between three workout choices using either the Up/Down arrows or Left/Right arrows. The three workout choices are: CALORIE Goal, TARGET HEART RATE Goal, and DISTANCE Goal. Select any of these three workouts by pressing ENTER when the desired workout is on the screen.

These workouts function like a MANUAL workout, where the user controls the speed and incline/level. The workout ends when the goal defined during the workout setup is reached. Set these workouts up by first selecting a specific goal and entering your goal. Continue to set up the rest of the information similar to any of the previously mentioned workouts.

The **Calorie Goal** workout allows the user to select a calorie goal to achieve during the workout. During the workout, the calorie window will display the initial goal set by the user and then count down to zero.

The **Target Heart Rate Goal** workout allows the user to select a target heart rate to achieve and maintain throughout the duration of the workout. The exercise equipment will keep the user at that target heart rate throughout the workout.

The **Distance Goal** workout allows the user to select a distance goal to achieve during the workout. During the workout the distance goal will be shown inside a track in the workout profile window.

## 5.3 HOW TO USE CUSTOM WORKOUTS

### OVERVIEW

There are two custom workouts on the Go Console, one for each user profile. When a user is logged into one of the two user profiles, the custom workout option will appear in the workouts list once the custom workout is set up. It will appear after the EXTREME HEART RATE workout. To execute, press ENTER when custom workout appears in the workout choices.

To edit a custom workout, first press the USER PROFILES button and select either Profile 1 or Profile 2. Once a profile is selected, press and hold the USER PROFILES button to enter Editing Mode.

Scroll to the option "Custom Workout" and then press ENTER to edit the workout. Upon pressing ENTER, the message center will display "Workout = Manual" (use the Up/Down arrows to scroll between MANUAL and HEART RATE workout – press ENTER to select). The user will next be asked to "Select Workout Time". The workout is constructed into 24 intervals each lasting the duration of 1/24th of the workout time entered. For example if you set a workout for 24 minutes, each of the 24 intervals will be 1 minute.

### EDITING A MANUAL CUSTOM WORKOUT

After setting a workout time, the following will occur if a manual workout is selected. The message center will display "Set Speed + Incl" (for treadmills) or "Set Resistance" (bikes and cross-trainers) for approximately 3 seconds. Next the message center will display "Interval 1". For treadmills, the user will select the speed and incline in the appropriate windows and then press ENTER to move to "Interval 2". For bikes and cross-trainers, the user will select the resistance in the appropriate window and then press ENTER to move to "Interval 2". This sequence will continue until all 24 intervals are set and then the message center will display "Workout Saved". Use the Left/Right arrows to move back and forth between intervals. **Note:** When each interval is set and saved, its corresponding visual representation of either incline or resistance is depicted in the workout profile. Therefore, by the end of setup, you will see your custom workout profile.

## EDITING A HEART RATE CUSTOM WORKOUT

After setting a workout time, the following will occur if a heart rate workout is selected. The message center will display “Set Target HR” for approximately 3 seconds. Next the message center will display “Interval 1”. The user will enter their desired target heart rate in the appropriate window and then press Enter to move to “Interval 2”. This sequence will continue until all 24 intervals are set. Use the Left/Right arrows to move back and forth between intervals. The message center will then display “Workout Saved”. Also note, when each interval is set and saved, its corresponding visual representation of target heart rate is depicted in the workout profile.

Row	Target Heart Rate Percent Range
9	100%
8	90 - 99%
7	80 - 89%
6	70 - 79%
5	60 - 69%
4	50 - 59%
3	40 - 49%
2	30 - 39%
1	<30%

**Note:** The percent in the table represents the user’s actual heart rate as a percent of their heart rate max. The heart rate max is  $206.9 - (.67 \times \text{user's age})$ . For example: A 40 year old’s heart rate max would be  $206.9 - (0.67 \times 40) = 180$ . During their workout at the first interval their actual heart was 100. Therefore  $100/180 = .56$  or 56% and the profile would display the user at row 4 for the first interval of the workout.

## RE-EDITING A PREVIOUSLY DESIGNED CUSTOM WORKOUT

In order to go back and edit a custom workout previously defined, re-enter the USER PROFILES Menu and scroll to the CUSTOM WORKOUT option to edit. Press and hold the USER PROFILES button to enter Editing Mode. When in Editing Mode, select the custom workout that has already been defined and press ENTER to view “interval 1” and its previously defined settings. When viewing “interval 1” use the arrows to modify the current defined settings or press ENTER to move to “interval 2”. This sequence will continue until all 24 intervals are set and then the message center will display “Workout Saved”.

## 5.4 HOW TO USE RACE MODE

### OVERVIEW

RACE Mode can be activated during a workout by pressing the RACE Mode key on the console. This function can only be used during a MANUAL, RANDOM, HILL, EZ INCLINE, or SPORTS TRAINING workout. RACE Mode is a function that allows the user to race against a simulated speed that is determined when RACE Mode is turned on. The user is represented by a filled in arrow above the workout profile and the pacer will be symbolized by the outline of the arrow. During RACE Mode, the workout profile column will blink to indicate where the user is at in the profile.

### BEGINNING A RACE

Press the RACE Mode key during a MANUAL, RANDOM, HILL, EZ INCLINE, or SPORTS TRAINING workout to turn RACE Mode on. At this point the RACE Mode symbol will illuminate. A prompt will appear in the message display to enter a desired speed. Speed can be changed using the Up/Down arrows. The speed entered will be the pacer's speed during the race. Once a race speed is entered, the pacer and the user arrows will begin at the first column and race across the workout profile. The pacer is symbolized by an outline of an arrow and the user is symbolized by the filled in arrow. The pacer's movement across the profile is determined by the set race speed and the time remaining in the workout. Therefore if the workout time is adjusted during the race, the pacer's settings are reconfigured and the race will start again from the first column.

## 5.5 HOW TO USE THE USER PROFILES

There are two user profile settings on the Go Console. Each profile allows a user to set up all of their settings and workout information. Therefore when a user is logged into a specific profile, they can quickly begin a workout without having to enter workout information. To log into a user profile press the USER PROFILE key and scroll to the desired profile and press ENTER. If that profile has been created, then the message center will display "Logged In". However if that profile account has not been defined then the message center will display "Undefined".

### SETTING UP A USER PROFILE

To setup a user profile, press the USER PROFILE key and scroll to either User Profile 1 or User Profile 2. Next, hold in the USER PROFILE key for three seconds to enter Editing Mode, the message center will display "Edit Profile". To navigate in the User Profile Editing mode use the following keys:

- Scroll through the editing options using the Left/Right arrows.
- Adjust the editing options using the Up/Down arrows (*except in Change Name and Custom Workout*).
- Use ENTER key or Left/Right arrows to save modifications and move to the next option.
- Use the RESET key to change back to the default value.

After displaying the message "Edit Profile", the message center will next display "My Profile Setup". Press ENTER when "My Profile Setup" as displayed to scroll between the following options to edit:

### CHANGE NAME – PRESS ENTER TO SELECT

If the user selects this option by pressing ENTER the message center will display PROFILE with the "P" blinking. At this point the user can use the Up/Down arrows to change the characters, the Left/Right arrows to move back and forth between characters and the RESET key to erase characters.

Once the user has entered in the correct name press ENTER to save. If there is inactivity for more than 10 seconds then the message center will display "PRESS ENTER TO SAVE".

Once the user presses ENTER to save they will input the remaining User Profile settings beginning with WEIGHT.

- Weight  
Message center displays "Weight = 150".  
Selection options are 75 lbs (34 kg) to the max of the product.
- Age  
Message center displays "Age = 40".  
Selection options are 10-99 years.
- Level  
Message center displays "Level = 1".  
Selection options are 1-20.



- Walk Speed (*treadmill only*)  
 Message center displays "Walk Speed = 0.5".  
 Selection options are 0.5-10 mph or 0.8-16 km/hr on the F3 and 0.5-12 mph or 0.8-19 km/hr on the T3.
- Jog Speed (*treadmill only*)  
 Message center displays "Jog Speed = 0.5".  
 Selection options are 0.5-10 mph or 0.8-16 km/hr on the F3 and 0.5-12 mph or 0.8-19 km/hr on the T3.
- Run Speed (*treadmill only*)  
 Message center displays "Run Speed = 0.5".  
 Selection options are 0.5-10 mph or 0.8-16 km/hr on the F3 and 0.5-12 mph or 0.8-19 km/hr on the T3.
- Default Speed (*treadmill only*)  
 Message center displays "Def Speed = 0.5".  
 Selection options are 0.5-10 mph or 0.8-16 km/hr on the F3 and 0.5-12 mph or 0.8-19 km/hr on the T3.
- Low Incline (*treadmill only*)  
 Message center will display "Low Inc = 1.5".  
 Selection options are 0-12% (F3) and 0-15% (T3).
- Mid Incline (*treadmill only*)  
 Message center will display "Mid Inc = 3.0".  
 Selection options are 0-12% (F3) and 0-15% (T3).
- High Incline (*treadmill only*)  
 Message center will display "High Inc = 5.0".  
 Selection options are 0-12% (F3) and 0-15% (T3).
- Distance Goal  
 Message center will display "Dist Goal = 1.0".  
 Selection options are 0.1 – 99.9 miles or 1.6 – 161 km.
- Time Goal  
 Message center displays "Time Goal = 30:00".  
 Selection options are 05:00 to 99:00.
- Warm Up Time  
 Message center displays "Warm Up = 02:00".  
 Selection options are 01:00 to 99:00.
- Cool Down Time  
 Message center displays "Cool Down = 02:00".  
 Selection options are 01:00 to 99:00.
- Custom Workout – press ENTER to select.  
 Refer to Custom Workout

## 5.6 SAFETY MODE

Safety Mode is an option on treadmills and cross-trainers. When turned on, the keyboard will lock out after 1 minute 30 seconds on treadmills and 1 minute on cross-trainers of inactivity in any mode. To return to the last screen, press ENTER. When in Safety Mode, cross-trainers will set resistance to level 20, making it difficult to move the pedals. Treadmills will be immobilized. The default is Safety Mode On. Safety Mode can be turned off in Settings. See Section 5.7, *How to Use the Settings Menu*.

## 5.7 HOW TO USE THE SETTINGS MENU

The Settings menu can be accessed by pressing the SETTINGS key at the “Select Workout” screen. Upon entering the Settings menu, the screen will display “SETTINGS MENU”.

- Scroll through the console setting options using the Left/Right arrows.
- Adjust setting items with the Up/Down arrows.
- Use the ENTER key or left/right arrow to save modifications and move to the next option.
- Use the RESET key to exit the settings menu.

The settings and selection options are listed below.

- English Metric Mode  
Displays “Units”  
Selection options are: English and Metric
- Beeps  
Displays “Beeps”  
Selection options are: On and Off
- Heart Rate Telemetry  
Display “WIRELESS HR = ON”  
Selection options are: On and Off
- Workout Timer  
Displays “Timer”  
Selection options are: Up or Down
- METS  
Displays “METS = OFF”  
Selection options are: On and Off
- Pace (*treadmill only*)  
Displays “PACE = OFF”  
Selection options are: On and Off
- RPM (*bike and cross-trainer only*)  
Displays “RPM = OFF”  
Selection options are On and Off
- Contrast  
Displays “Contrast”  
Selection options are: 1-99
- Brightness  
Selection options are 1-10
- Safety Mode (*cross-trainer and treadmill only*)  
Displays “Safety Mode”  
Selection options are: On or Off
- Statistics – press ENTER to select  
“Total Hours” (total number of hours the product was used in a workout)  
“Total Miles” (number of miles that the product was used for)

- Software Version – press ENTER to select
  - Console Software Version
  - Console Software Part Number
  - Console Software Build Date

- Floor Model – disables Power Save
  - Selection options are On or Off
  - Default is Off (Power Save On)

- Belt Lube Timer (*treadmill only*)

Tracks the total hours of workout and cool down time since the last belt lubrication. When the timer reaches 75 hours it triggers a reminder message during every workout.

Press and hold the DOWN arrow key for 5 seconds to reset the time.

### **Lubricating the Walking Belt**

1. Turn the treadmill off with the ON / OFF switch and then unplug the power cord from the outlet.
2. Loosen the rear roller adjustment bolts approximately 10 full turns. Be sure to note how many turns you have rotated the screws since this is how many turns you will tighten them at the end of this procedure.
3. Using the Silicon lubricant approved by Life Fitness, apply one half of the bottle to the surface of the deck between the belt and the deck. Try to apply the majority of the lubricant to the center of the deck.
4. Visually make sure the walking belt is centered on the deck and then tighten the rear roller adjustment bolts the same number of turns as when you loosened them.
5. Plug the treadmill in and turn on the ON / OFF switch.
6. Run the treadmill at 3 mph / 5 kph and check that the belt runs centered. If not, see *How to Adjust and Tension the Striding Belt* in the base model's Owner's Manual.
7. Reset the LUBRICATE WALKING BELT message on the console. To reset the message enter the Settings Menu. Scroll to the Message: HOURS SINCE BELT LUBRICATION = XXXX. Press and hold the DOWN arrow key for 10 seconds to reset the lubrication timer.

# 6 SERVICE AND PRODUCT MAINTENANCE

The Life Fitness products are backed by engineering excellence and are one of the most rugged and trouble-free pieces of exercise equipment on the market today.

**Note:** The safety of the equipment can be maintained only if the equipment is examined regularly for damage or wear. If maintenance is required, keep the equipment out of use until defective parts are repaired or replaced. Pay special attention to parts that are subject to wear as outlined below.

## 6.1 PREVENTIVE MAINTENANCE TIPS

The following preventive maintenance tips will keep the console operating at peak performance:

- Locate the product in a cool, dry place.
- Keep the console free of fingerprints and salt build-up caused by sweat.
- Use a **100% cotton cloth**, lightly moisten with water and a mild liquid cleaning product, to clean the exercise equipment. Other fabrics, including paper towels, may scratch the surface. **Do not use ammonia or acid-based cleaners.**
- Long fingernails may damage or scratch the surface of the console; use the pad of the finger to press the selection buttons on the console.
- Clean the housing thoroughly on a regular basis.

### LIFE FITNESS APPROVED CLEANERS

Two preferred cleaners have been approved by Life Fitness reliability experts: PureGreen 24 and Gym Wipes. Both cleaners will safely and effectively remove dirt, grime and sweat from equipment. PureGreen 24 and the Antibacterial Force formula of Gym Wipes are both disinfectants that are effective against MRSA and H1N1.

PureGreen 24 is available in a convenient spray. Apply the spray to a microfiber cloth and wipe down the equipment. Use PureGreen 24 on the equipment for at least 2 minutes for general disinfection purposes and at least 10 minutes for fungus and viral control.

Gym Wipes are large, durable pre-moistened wipes to use on the equipment before and after workouts. Use Gym Wipes on the equipment for at least 2 minutes for general disinfection purposes.

Contact Life Fitness Customer Support Services to order these cleaners.  
Call 1-800-351-3737 or email: [customersupport@lifefitness.com](mailto:customersupport@lifefitness.com).

### LIFE FITNESS COMPATIBLE CLEANERS

Mild soap and water or a mild non-abrasive household cleaner can also be used to clean the display and all exterior surfaces. Use a soft cotton cloth only. Apply the cleaner to the cotton cloth before cleaning. **DO NOT** use ammonia or acid based cleaners. **DO NOT** use abrasive cleaners. **DO NOT** use paper towels. **DO NOT** apply cleaners directly to the equipment surfaces.

## 6.2 TROUBLESHOOTING

PROBLEM	CAUSE / SOLUTION
No power	Check to see that the power cord is fully plugged into the back of the product and into the wall. Make sure the power cord is fully seated into the back of the product.
	You may be in “Energy Saver Mode”. Press the “Energy Saver” button to see if the console turns on.
	Verify that all customer assembly connections are working properly. Unplug and re-plug each connection to verify. Look to see if any cables were pinched during assembly.
Wireless Heart Rate is Not Working	<p>Potential reasons for the wireless heart rate not to work properly include:</p> <ol style="list-style-type: none"> <li>1. The wireless heart rate is turned OFF in the Settings Menu. Enter the Settings Menu and verify that WIRELESS HR is turned ON.</li> <li>2. There is poor contact between the telemetry heart rate strap and the skin.</li> <li>3. There is electrical interference from electrical appliances with the telemetry heart rate strap from fluorescent lights, kitchen appliances, etc. Move the product to a different location or move electrical appliances away from the product.</li> <li>4. The battery in the Heart Rate Telemetry Strap needs to be replaced. The battery is a CR2032 (3V).</li> </ol>
Heart rate reading is initially detected and functioning normally but then is lost	<p>Use of personal electronic devices, such as cell phones and portable mp3 players, cause external noise interference.</p> <p>Equipment is in close proximity to other sources of noise such as audio/ video equipment, fans, two way radios, and high voltage/high current power line.</p> <p>Remove the source of noise or reposition the exercise equipment.</p>
Contact heart rate sensors are not reading my heart rate correctly	Be sure to grasp the sensors firmly and keep hands still. If heart rate seems substantially higher or lower than expected, remove hands from sensors until heart rate disappears.
	<p>Tips for contact heart rate:</p> <ol style="list-style-type: none"> <li>1. Dry hands to prevent slipping on the sensors.</li> <li>2. Apply hands to all four sensors (two in each hand).</li> <li>3. Grasp sensors firmly.</li> <li>4. Apply constant pressure to the sensors.</li> <li>5. May need to wait longer for heart rate to display.</li> </ol>
	<b>Note:</b> The heart rate hand pulse sensors provide an approximate heart rate value. The sensors are not medical devices and should not be used in any type of medical application.

PROBLEM	CAUSE / SOLUTION
Stuck key error is displayed	One of the keys is stuck under the plastic console shell. Check all keys and unstick the one that is stuck. If that does not work, unplug the unit and plug it back in.
Console turns off when not in use	The unit will go into Energy Saver mode after 5 minutes of inactivity. Press the ENERGY SAVER button to turn the console on.
Console display looks strange or has an error message and is not functioning	Unplug or turn the unit OFF to reset the console and then turn ON or plug the console back in. Repeat multiple times if the console error message still appears. If the problem persists, contact Customer Support Services.

### 6.3 HOW TO OBTAIN PRODUCT SERVICE

1. Verify the symptom and review the operating instruction. The problem may be unfamiliarity with the product and its features and workouts.
2. Locate and document the serial number of the base unit and console.
  - Treadmill: located on the front of the treadmill near the power switch.
  - Cross-Trainer: located on the main frame in front of the rear shrouds.
  - Bikes: located on the front stabilizer below the shroud.
  - Console: located on the back of the console.
3. Contact Customer Support Services via the Web at [www.lifefitness.com](http://www.lifefitness.com), or call the nearest Customer Support Services group.

# 7 SPECIFICATIONS

## LIFE FITNESS GO CONSOLE SPECIFICATIONS

Number of Workouts:	10
User Profiles:	2
Interactive Heart Rate Programming:	Yes
Heart Rate Telemetry:	Yes
Contact Heart Rate:	Yes
Goal Workouts:	Yes - 3
Race Mode:	Yes
Levels:	20
Message Center:	Yes - 16 character
Display Type:	Custom-etched LCD
Energy Saver:	Yes
Warranty:	3 years

Shipped Dimensions	Go Console Treadmills	Go Console Cross-Trainers / Bikes
Length	18 in. / 45.7 cm.	17.5 in. / 44.5 cm
Width	18 in. / 45.7 cm.	15.5 in. / 39.4 cm.
Height	5 in. / 12.7 cm.	4.5 in. / 11.43 cm
Weight	6 lbs. / 2.72 kg.	5 lbs. / 2.27 kg.

# 8 WARRANTY INFORMATION

Model	3 Years	1 Year
Go Console	Electrical & Mechanical Parts <i>Note: Excludes 3V batteries</i>	Labor

## WHAT IS COVERED:

This Life Fitness consumer product ("Product") is warranted to be free of all defects in material and workmanship.

## WHO IS COVERED:

The original purchaser or any person receiving a newly purchased Product as a gift from the original purchaser. Warranty will be voided on subsequent transfers.

## HOW LONG IS IT COVERED:

Residential: All electrical and mechanical components and labor are covered, after the date of purchase, as listed on the chart above.

Non-Residential: Warranty void (this Product is intended for residential use only).

## WHO PAYS SHIPPING & INSURANCE FOR SERVICE:

If the Product or any warranted part must be returned to a service facility for repairs, Life Fitness will pay all shipping and insurance charges during the warranty period (within the United States only). The purchaser is responsible for shipping and insurance charges after the warranty has expired.

## WHAT WE WILL DO TO CORRECT COVERED DEFECTS:

We will ship to you any new or rebuilt replacement part or component, or, at our option, replace the Product. Such replacement parts are warranted for the remaining portion of the original warranty period.

## WHAT IS NOT COVERED:

Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, debris resulting from any construction activities in the Product's environment, rust or corrosion as a result of the Product's location, alterations or modifications without our written authorization or by failure on your part to use, operate and maintain the Product as set out in your User Manual ("Manual"). All terms of this warranty are void if this Product is moved beyond the continental borders of the United States of America (excluding Alaska, Hawaii and Canada) and are then subject to the terms provided by that country's local authorized Life Fitness Representative.

## WHAT YOU MUST DO:

Retain proof of purchase. Use, operate and maintain the Product as specified in the Manual; notify the place of purchase of any defect within 10 days after discovery of the defect; if instructed, return any defective part for replacement or, if necessary, the entire Product for repair. Life Fitness reserves the right to decide whether or not a product is to be returned for repair.

## USER MANUAL:

It is VERY IMPORTANT THAT YOU READ THE MANUAL before operating the Product. Remember to perform the periodic maintenance requirements specified in the Manual to assure proper operation and your continued satisfaction.

## PRODUCT REGISTRATION:

Register online at [www.lifefitness.com/home/product-registration.html](http://www.lifefitness.com/home/product-registration.html). Our receipt assures that your name, address and date of purchase are on file as a registered owner of the Product. Being a registered owner assures coverage in the event you lose your proof of purchase. Please retain your proof of purchase, such as your bill of sale or receipt.



**HOW TO GET PARTS & SERVICE:**

Refer to page one of this manual for your local service contact information. Reference your name, address and the serial number of your Product (consoles and frames may have separate serial numbers). They will tell you how to get a replacement part, or, if necessary, arrange for service where your Product is located.

**EXCLUSIVE WARRANTY:**

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART. We neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall we be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental or consequential damages of any nature arising out of the use of or inability to use this Product. Some states do not allow the exclusion or limitation of implied warranties or of liability for incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranties may vary outside the U.S. Contact Life Fitness for details.

**CHANGES IN WARRANTY NOT AUTHORIZED:**

No one is authorized to change, modify or extend the terms of this limited warranty.

**EFFECT OF U.S. STATE LAWS:**

This warranty gives you specific legal rights and you may have other rights which vary from state to state.